


AAV Dip'n'Check Lateral Flow Tests

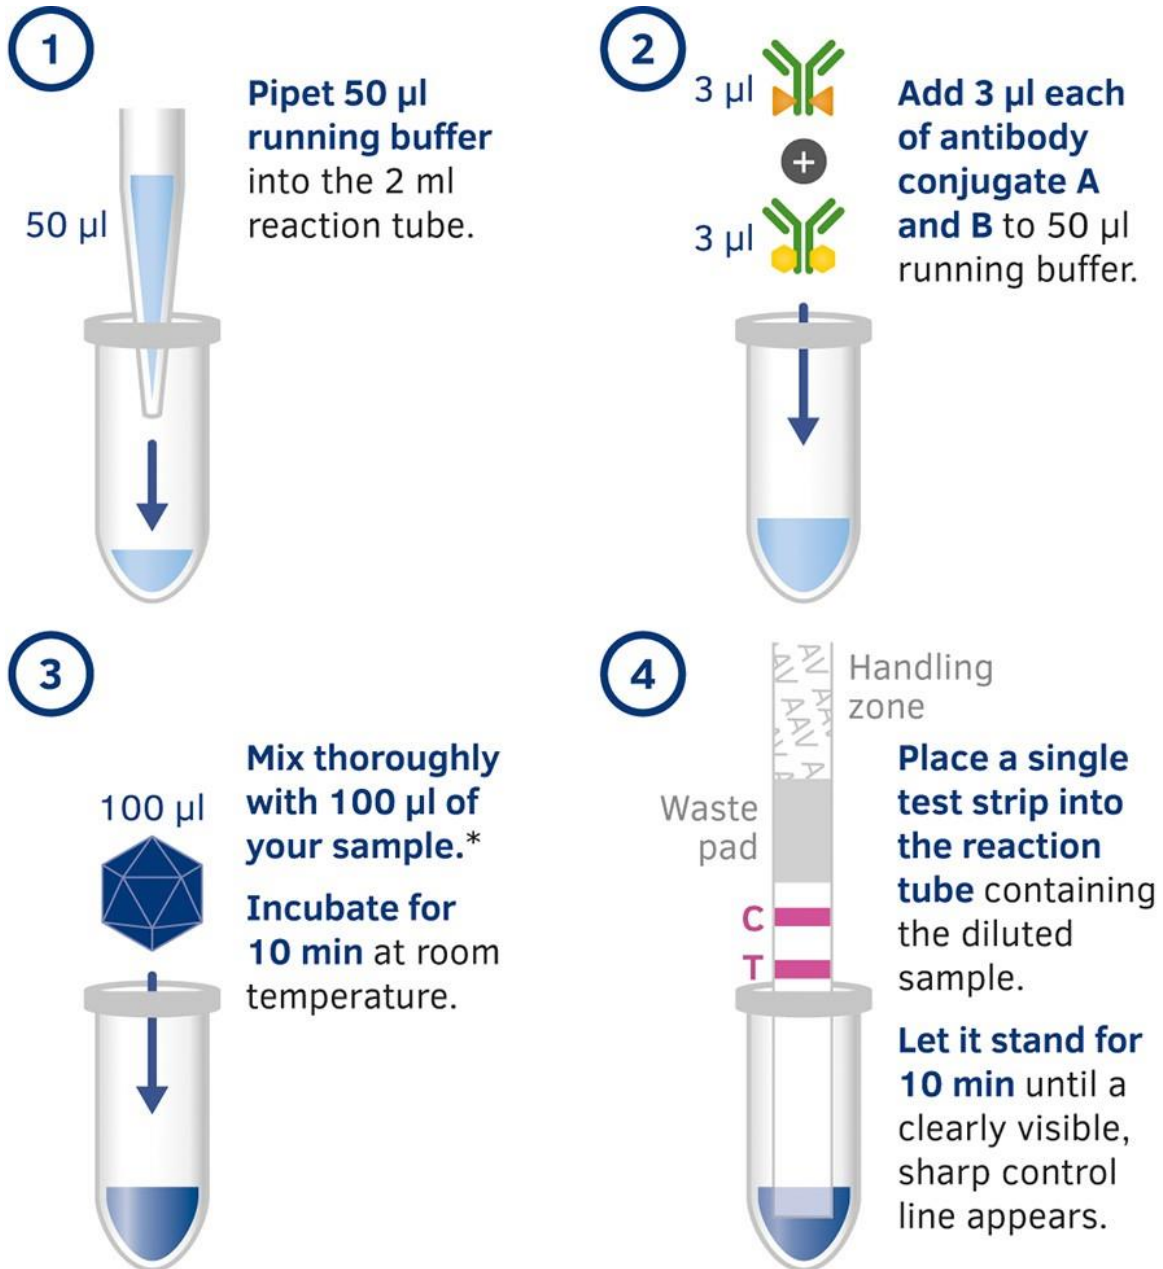

*Use more than one dilution of your sample of cell lysate or purified AAVs, e.g. in PBS, to reach the detection range of this test.